

GV55LITE Quick Start

Page 1 : Basic Operation

1


Check Parts List



The USB Data_Cable_M is not in the delivery list. Please contact your vendor for it.

2

Open the case triangular-pry-opener

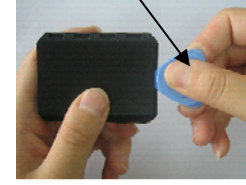

3

Install SIM Card



4

Close the case




5

Find "PL2303_Prolific_DriverInstaller_v10518.zip" in develop suit and install the drive for PL2303. If you have already installed it please go to Step 6.




6

Connect GV55LITE to computer by USB Data_Cable_M.

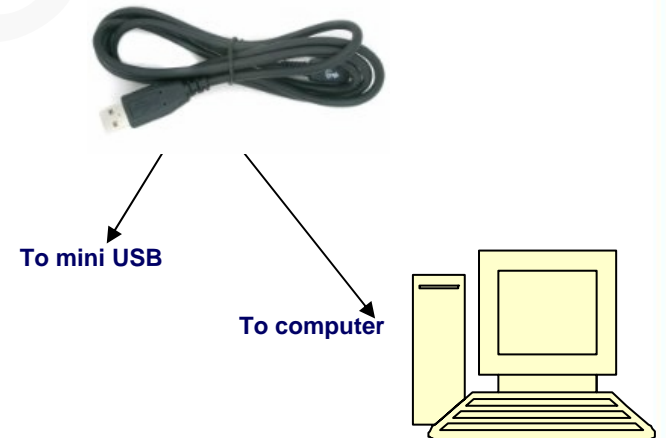

7


Find "Queclink GV55LITE Manager Tool Vx.xx.exe" in develop suit and run it to configure the running parameters of GV55LITE

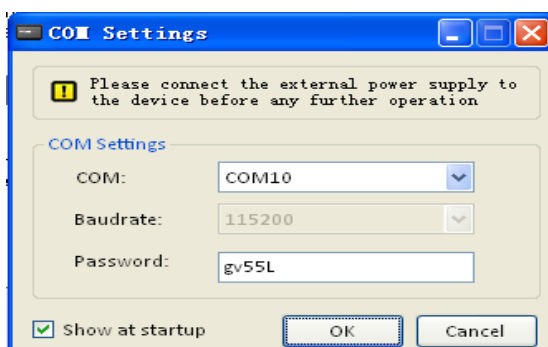

Page 2 : PC Manager Tool Quick Start

1


Run manager tool. Select correct Com port and input default password "gv55L". Then press OK.

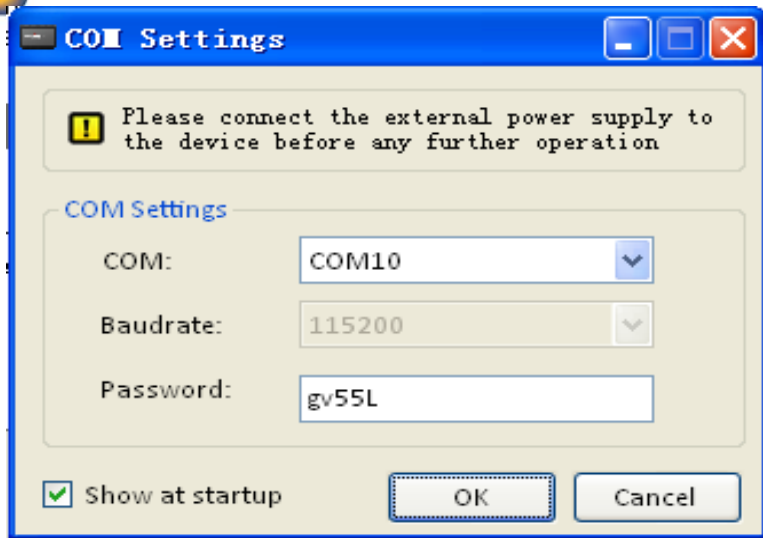

2


If you want to test the GV55Lite by SMS then set "Report Mode" to "SMS" and input the phone number which you want to receive the SMS from GV55Lite. After that you can go to Step 6.

Otherwise please go to Step 3

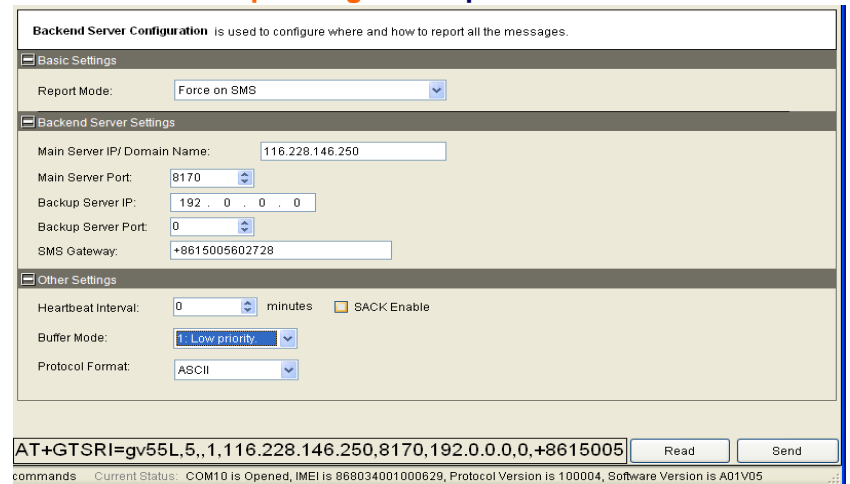


3

Set "Report Mode" to "TCP Short Connection". input the IP address and port number of the backend server.

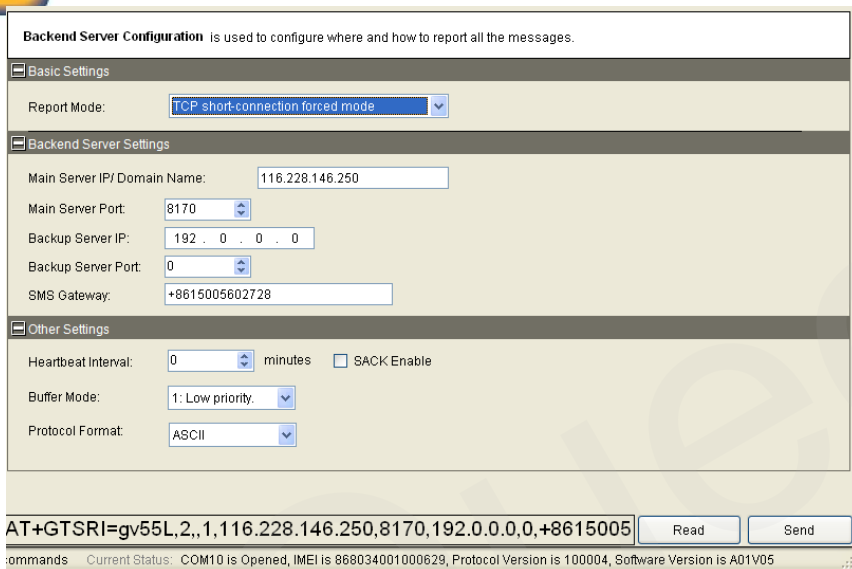

4


Please contact your SIM card provider and get the APN information for GPRS. Input it in GTBSI setting.

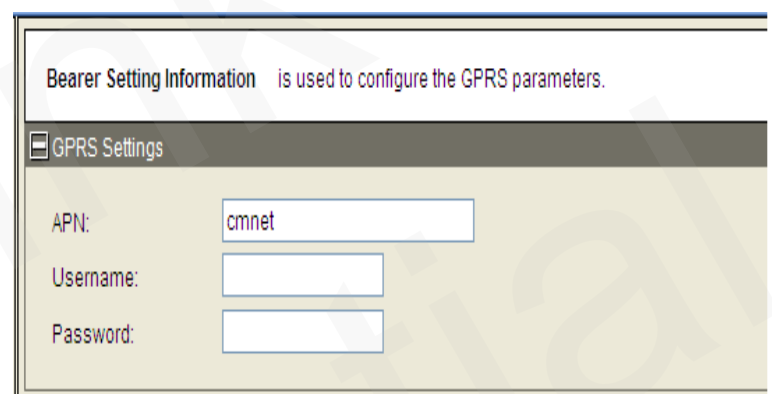


5

Press the "Send" button and update the parameters of GV55Lite. Then the GV55Lite can report information to your backend server or SMS receiver.

 Note: These commands can also be sent to GV55Lite by SMS.




Command has been accepted when you see the suc-

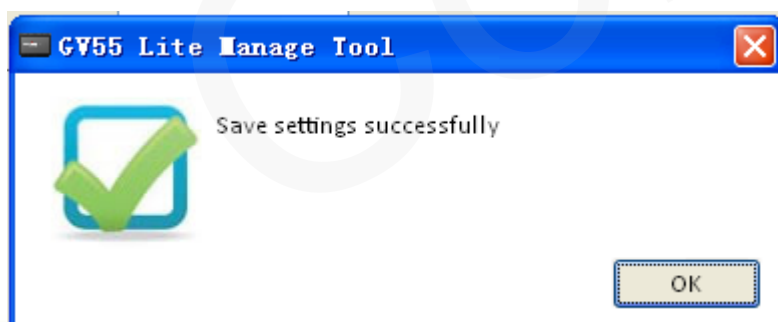

6


Set the parameters of scheduled fixed timing report so that the GV55Lite will report it's position to backend server period periodically. Press "Send" button to update the parameters.

Follow screen shot shows how to configure the GV55Lite to report it's position every 3 minutes.

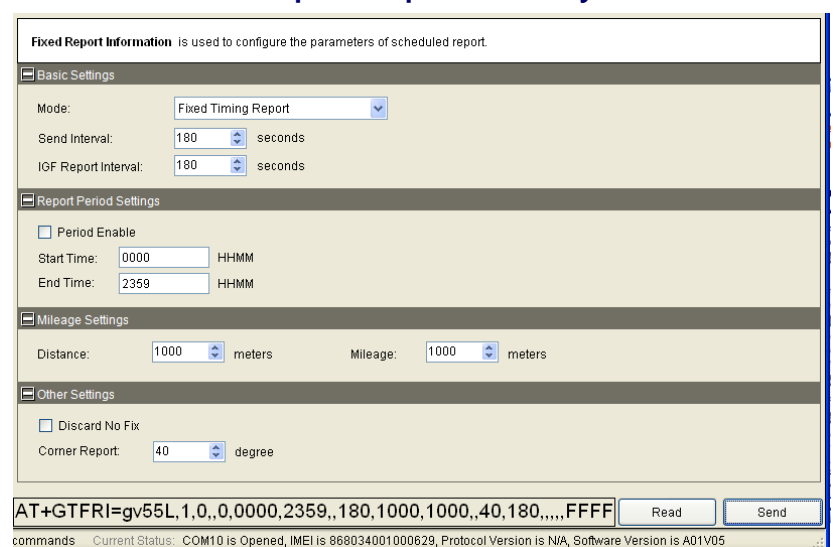

7

The following screen shot shows how to create a Geo-Fence rule. Press "Send" button to update the parameters.

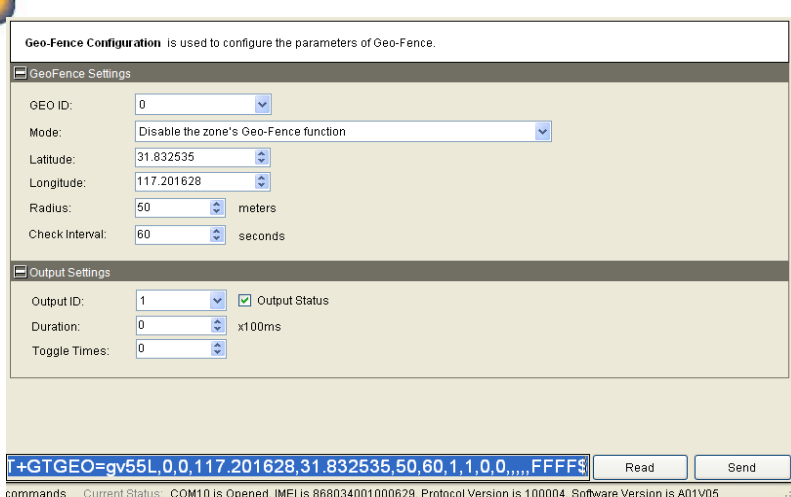

After these steps. GV55Lite will have some basic tracking functions like scheduled timing report and Geo-Fence. For other advanced functions of GV55Lite please refer to "GV55Lite @Tracker Air Interface Protocol" or visit our website.