

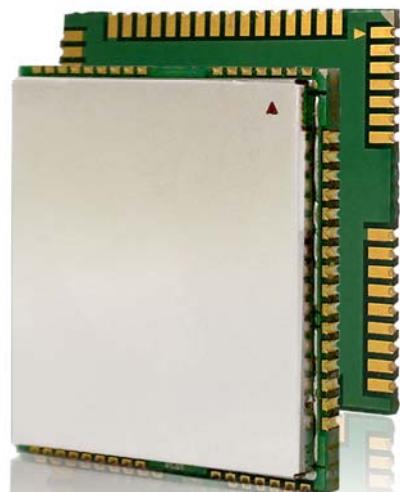


M10

Quectel Cellular Engine

EVB User Guide

M10_EVB_UGD_V2.0



Document Title	EVB User Guide
Version	2.0
Date	2011-04-18
Status	Release
Document Control ID	M10_EVB_UGD_V2.0

General Notes

Quectel offers this information as a service to its customers, to support application and engineering efforts that use the products designed by Quectel. The information provided is based upon requirements specifically provided for Quectel by the customers. Quectel has not undertaken any independent search for additional relevant information, including any information that may be in the customer's possession. Furthermore, system validation of this product designed by Quectel within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change.

Copyright

This document contains proprietary technical information which is the property of Quectel Limited. The copying of this document, distribution to others, and communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights are reserved in the event of a patent grant or registration of a utility model or design. All specification supplied herein are subject to change without notice at any time.

Copyright © Quectel Wireless Solutions Co., Ltd. 2011

Contents

0. Revision History	1
1. Introduction.....	2
1.1. Related Documents	2
1.2. Safety Precautions.....	2
2. EVB Kit Introduction.....	4
2.1. EVB Top and Bottom View	4
2.2. EVB Accessories.....	6
3. Interface Application	7
3.1. Power Interface	7
3.2. Audio Interface.....	8
3.3. SIM Card Interface.....	9
3.4. Antenna Interface	9
3.5. Serial Port and Debug Port.....	10
3.6. Switches and Buttons	11
3.7. Operating Status LED	12
3.8. Test Points.....	13
3.8.1 RS232	13
3.8.2 POWER	14
3.8.3 KEYPAD	15
3.8.4 LCD	16
4. EVB Accessories Assembly.....	17
5. Illustration.....	18
5.1. Power on	18
5.2. Communicate with the module.....	18
5.3. Firmware upgrade through UART1	18
5.4. Turn Off.....	19
5.5. Emergency Off	19
5.6. UART 3	20
6. 60 PINs Assignment of DIP Connector.....	21

Table Index

Table 1: Related documents	2
Table 2: Pin of power interface	7
Table 3: Pins of audio channel 2	8
Table 4: Pins of audio channel 1	8
Table 5: Pins of SIM card interface.....	9
Table 6: Pins of Serial port.....	10
Table 7: Pins of Debug port	10
Table 8: Pins of UART port3.....	11
Table 9: Switches and buttons.....	12
Table 10: Status LEDs.....	12
Table 11: Pins of CON401	13
Table 12: Pins of CON103	14
Table 13: Pins of CON102	15
Table 14: Pins of CON101	16
Table 15: Pin definition of the 60-pin DIP connector	21

Figure Index

Figure 1: EVB top view	4
Figure 2: EVB bottom view	5
Figure 3: Accessories introduction.....	6
Figure 4: Power interface	7
Figure 5: Audio interface	8
Figure 6: SIM card interface	9
Figure 7: Antenna interface.....	9
Figure 8: Serial port and Debug port.....	10
Figure 9: UART 3	11
Figure 10: Switches and buttons	11
Figure 11: Operating status LED	12
Figure 12: Test points overview	13
Figure 13: RS232 points	13
Figure 14: POWER points	14
Figure 15: KEYPAD points	15
Figure 16: LCD points	16
Figure 17: EVB and accessories equipment.....	17
Figure 18: Side view of EVB	17
Figure 19: Switches state for firmware downloading	19
Figure 20: Connection of UART 3	20
Figure 21: DIP connector of EVB.....	21

0. Revision History

Revision	Date	Author	Description of change
1.00	2009-06-17	Tracy ZHANG	Origin
1.01	2009-11-12	Yong AN	<ol style="list-style-type: none">Modified figure5、6、7、and 10.Added some content on how to better operate module for customer when module is set to autobauding in default in Chapter 5.2.
2.0	2011-04-15	Roy CHEN	<ol style="list-style-type: none">Updated related figures.Added UART3 introduction in chapter5.6

1. Introduction

This document defines and specifies the usage of M10 EVB. Customers can get useful information about M10 EVB from this document.

1.1. Related Documents

Table 1: Related documents

SN	Document name	Remark
[1]	M10_ATC	AT commands sets
[2]	GSM_UART_AN	The document of serial port application note
[3]	M10_HD	Hardware design
[4]	GSM_FW_UPGRADE_AN01	Firmware upgrade application notes
[5]	GSM_DUAL_UART_AN_V1.0	GSM_DUAL_UART application Notes

1.2. Safety Precautions

The following safety precautions must be observed during all phases of the operation, such as usage, service or repair of any cellular terminal or mobile incorporating M10 module. Manufacturers of the cellular terminal are advised to convey the following safety information to users and operating personnel and to incorporate these guidelines into all manuals supplied with the product. If not so, Quectel does not take on any liability for customer failure to comply with these precautions.



When in a hospital or other health care facility, observe the restrictions on the use of mobile. Switch the cellular terminal or mobile off. Medical equipment may be sensitive to RF energy interference.



Switch off the cellular terminal or mobile before boarding an aircraft. Make sure it switched off. The operation of wireless appliances in an aircraft is forbidden to prevent interference with communication systems. Forget to think much of these instructions may influence the flight safety or offend against local legal action, or both.



Do not operate the cellular terminal or mobile in the presence of flammable gas or fume. Switch off the cellular terminal when you are near petrol station, fuel depot, chemical plant or where blasting operations are in progress. Operation of any electrical equipment in potentially explosive atmosphere can constitute a safety hazard.



Your cellular terminal or mobile receives and transmits radio frequency energy while switched on. RF interference can occur if it is used close to TV set, radio, computer or other electric equipment.



Road safety comes first! Do not use a hand-held cellular terminal or mobile while driving a vehicle, unless it is securely mounted in a holder for hands-free operation. Before making a call with a hand-held terminal or mobile, park the vehicle.



GSM cellular terminals or mobiles operate using radio frequency signal and cellular network. Because of this, the connection cannot be guaranteed in all conditions, for example no mobile fee or an invalid SIM card. While you are in this condition and need emergent help, please remember using emergency call. In order to make or receive calls, the cellular terminal or mobile must be switched on and in a service area with adequate cellular signal strength.

Some networks do not allow for emergency call if certain network services or phone features are in use (e.g. lock functions, fixed dialing etc.). You may have to deactivate those features before you can make an emergency call.

Also, some networks require that a valid SIM card be properly inserted in cellular terminal or mobile.

2. EVB Kit Introduction

2.1. EVB Top and Bottom View

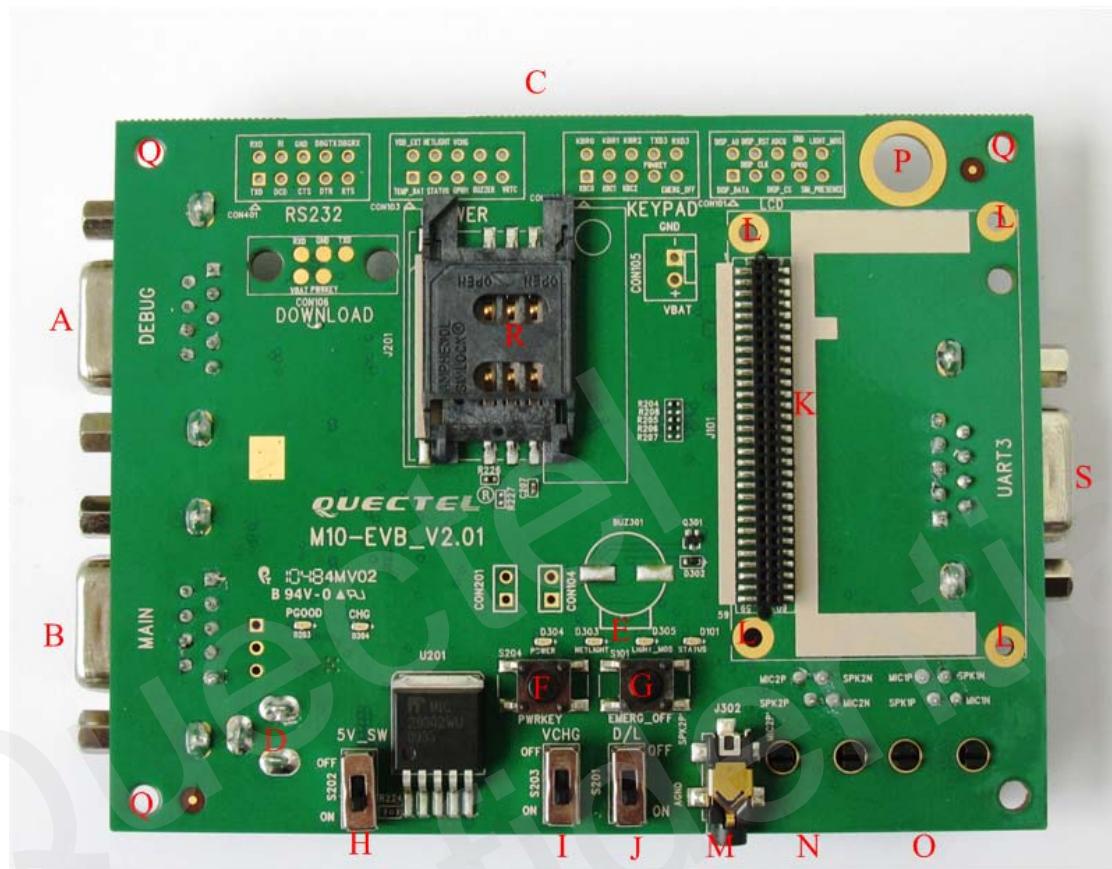


Figure 1: EVB top view

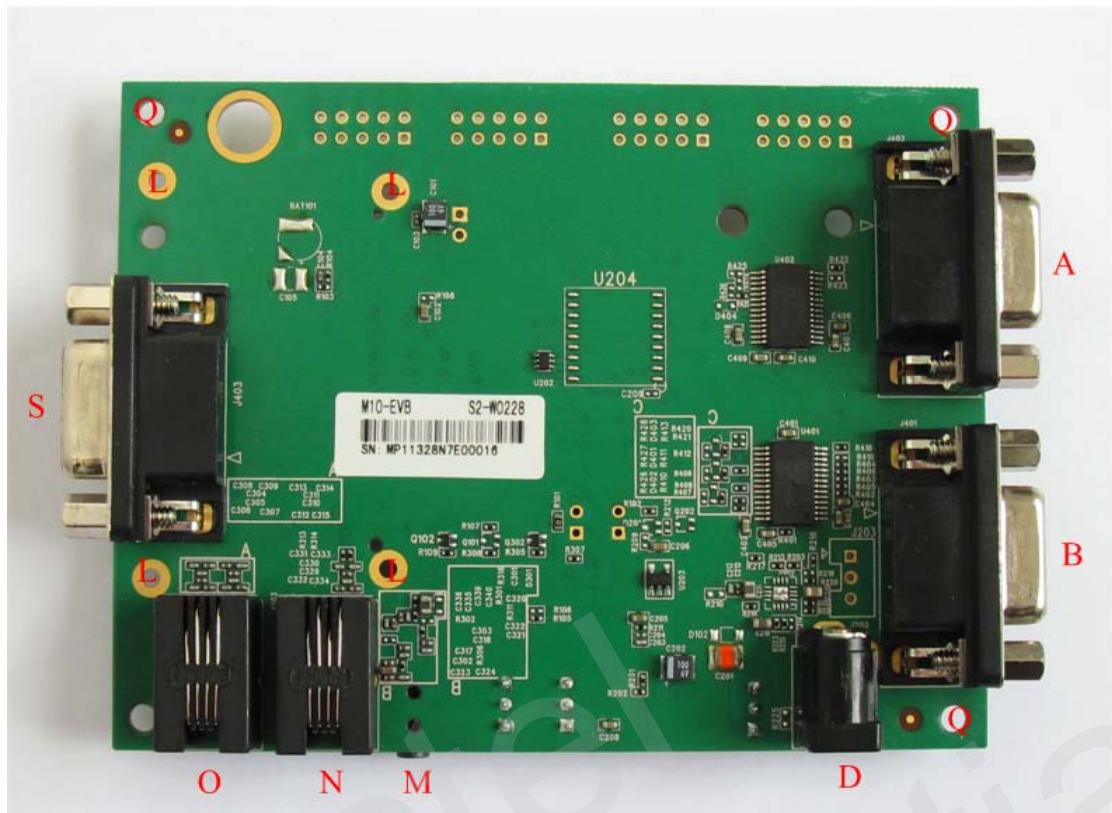


Figure 2: EVB bottom view

- A: Debug port
- B: Serial port
- C: Test points
- D: Adapter interface
- E: LED indicating module status
- F: PWRKEY button
- G: EMERG_OFF button
- H: VBAT switch
- I: VCHG switch (charging function)
- J: Download switch
- K: 60 pins M10-TE-A interface
- L: Screw holes for fixing the module
- M: Earphone interface
- N: Handset interface of audio channel 2
- O: Handset interface of audio channel 1
- P: Fixture hole for RF cable connector
- Q: Fixture holes for EVB poles
- R: SIM card interface
- S: UART port 3

2.2. EVB Accessories

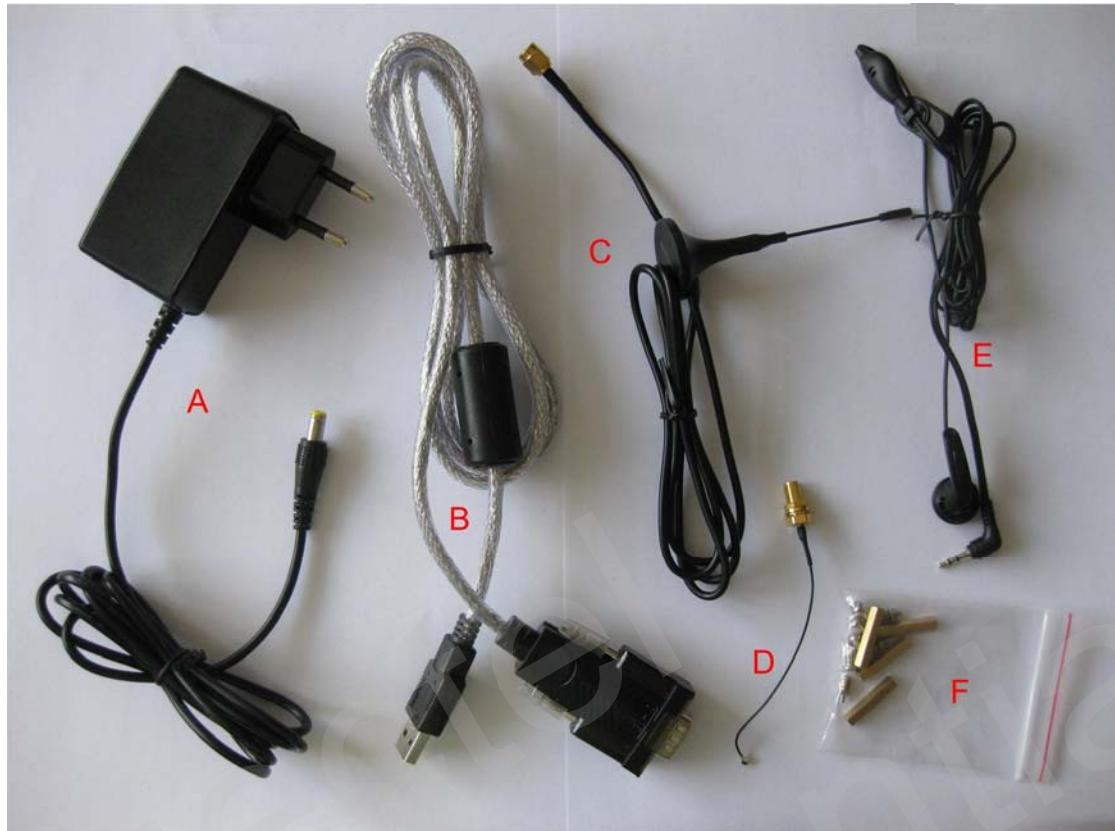


Figure 3: Accessories introduction

- A: 5V DC switching adapter
- B: USB to UART converter cable
- C: Antenna
- D: RF cable
- E: Earphone
- F: Bolts and nuts for fixing module and EVB

3. Interface Application

3.1. Power Interface

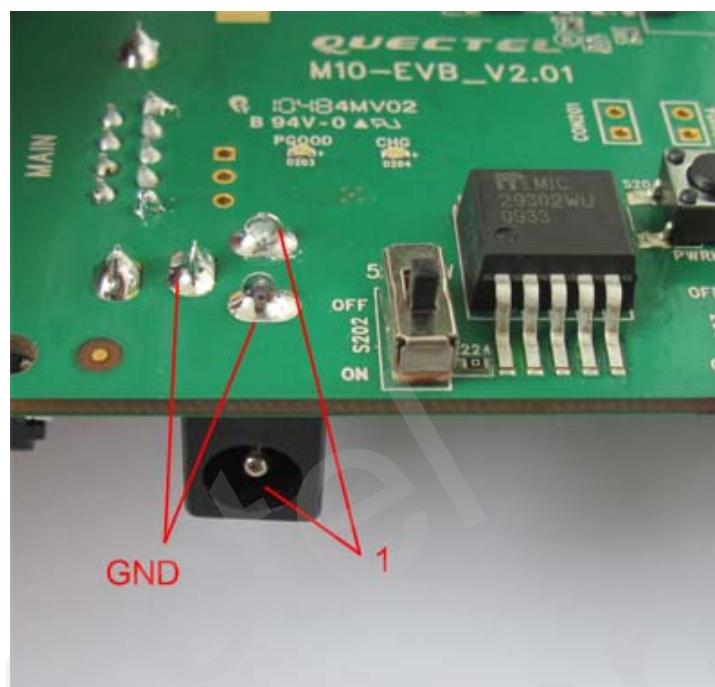


Figure 4: Power interface

Table 2: Pin of power interface

Pin	Signal	I/O	Description
1	Adapter input	I	5V/2A DC source input

3.2. Audio Interface

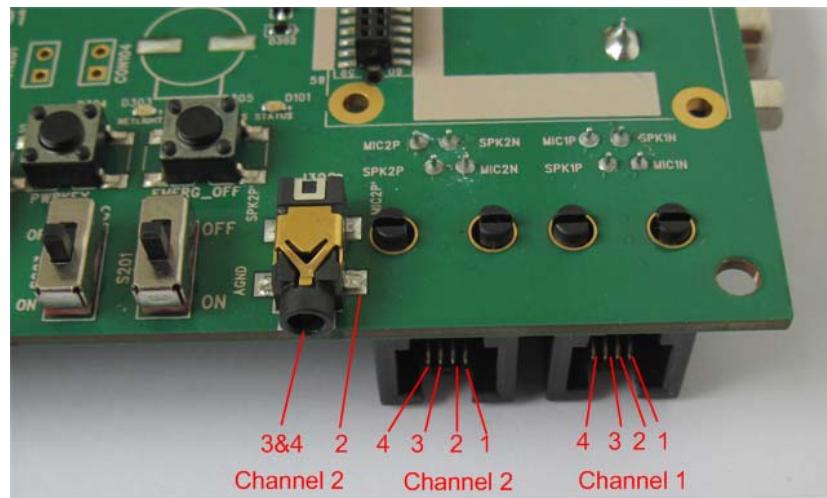


Figure 5: Audio interface

Table 3: Pins of audio channel 2

Pin	Signal	I/O	Description
1	MIC2N	I	Negative microphone input
2	AGND		AGND of audio circuits
3	SPK2P	O	Positive receiver output
4	MIC2P	I	Positive microphone input

An earphone or handset can be used in audio channel 2.

Table 4: Pins of audio channel 1

Pin	Signal	I/O	Description
1	MIC1N	I	Negative microphone input
2	SPK1N	O	Negative receiver output
3	SPK1P	O	Positive receiver output
4	MIC1P	I	Positive microphone input

3.3. SIM Card Interface

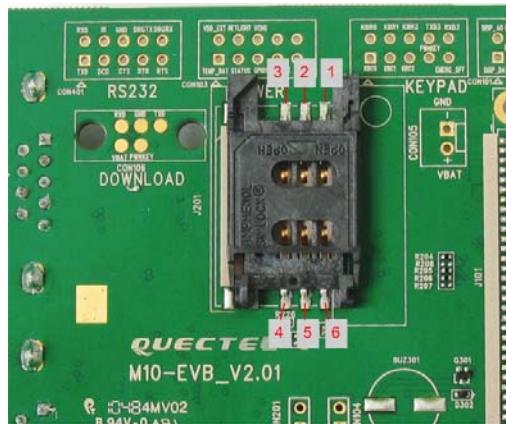


Figure 6: SIM card interface

Table 5: Pins of SIM card interface

Pin	Signal	I/O	Description
1	GND		Ground
2	VPP		Not connected
3	SIM_DATA	I/O	SIM card data I/O
4	SIM_CLK	O	SIM card clock
5	SIM_RST	O	SIM card reset
6	SIM_VDD	O	SIM card power output

3.4. Antenna Interface



Figure 7: Antenna interface

3.5. Serial Port and Debug Port

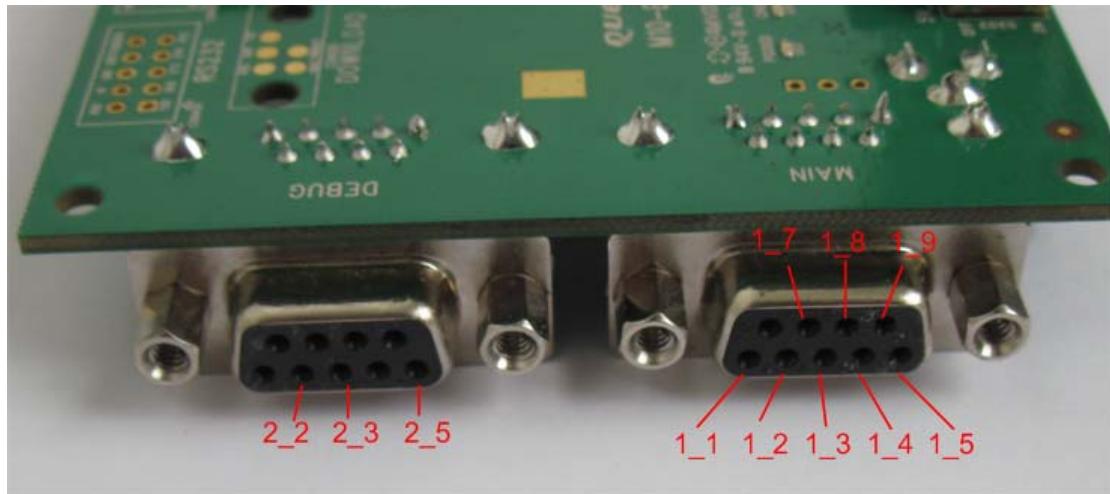


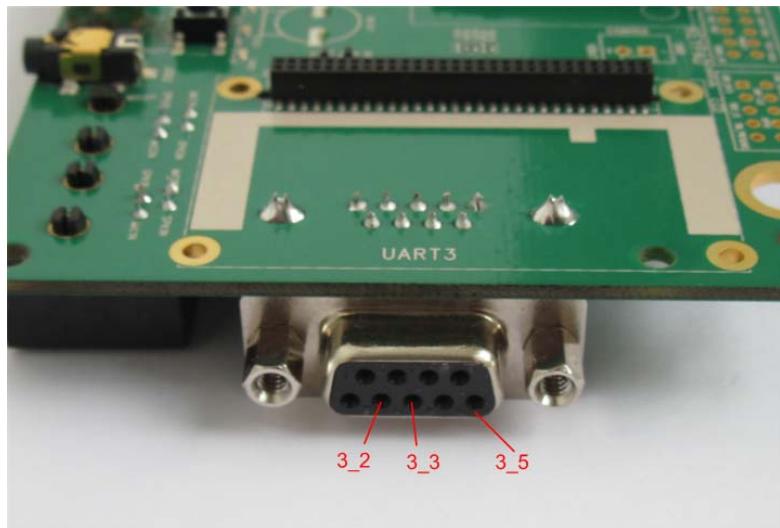
Figure 8: Serial port and Debug port

Table 6: Pins of Serial port

Pin	Signal	I/O	Description
1_1	DCD	O	Data carrier detection
1_2	TXD	O	Transmit data
1_3	RXD	I	Receive data
1_4	DTR	I	Data terminal ready
1_5	GND		Ground
1_7	RTS	I	Request to send
1_8	CTS	O	Clear to send
1_9	RI	O	Ring indicator

Table 7: Pins of Debug port

Pin	Signal	I/O	Description
2_2	DBG_TXD	O	Transmit data
2_3	DBG_RXD	I	Receive data
2_5	GND		Ground

**Figure 9: UART 3****Table 8: Pins of UART port3**

Pin	Signal	I/O	Description
3_2	UART3_TXD	O	Transmit data
3_3	UART3_RXD	I	Receive data
3_5	GND		Ground

3.6. Switches and Buttons

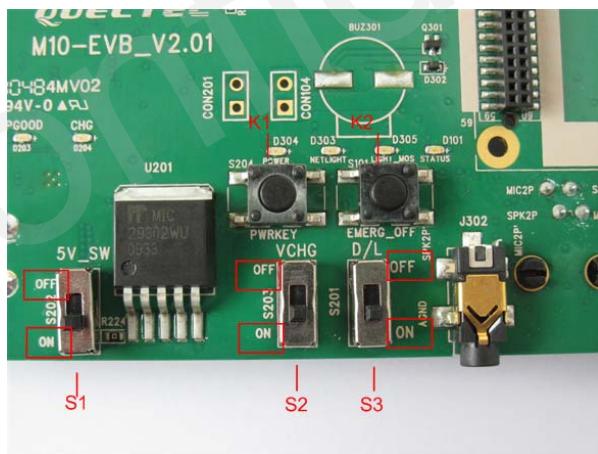
**Figure 10: Switches and buttons**

Table 9: Switches and buttons

Part	Name	I/O	Description
S1	VBAT	I	Control power supply via adaptor
S2	VCHG	I	Control charging if module has charging function
S3	D/L	I	Pull to “ON” when downloading firmware
K1	PWRKEY	I	Turn on/off the module
K2	EMERG_OFF	I	Emergency button for shutting down the system

3.7. Operating Status LED

**Figure 11: Operating status LED****Table 10: Status LEDs**

Part	Name	I/O	Description
L1	VBAT ON/OFF indicator	O	Bright: VBAT ON Extinct: VBAT OFF
L2	GSM_NET status indicator	O	Blinking at a certain frequency according various GSM network status
L3	LIGHT_MOS indicator	O	Specially for LIGHT_MOS demo
L4	Module status indicator	O	Indication of module operating status;

3.8. Test Points

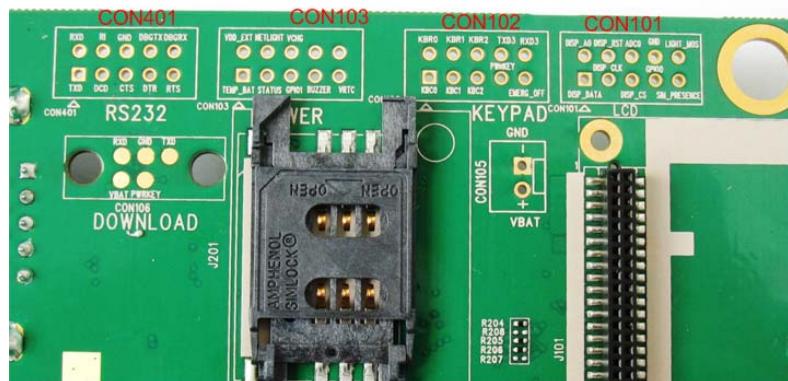


Figure 12: Test points overview

3.8.1 RS232



Figure 13: RS232 points

Table 11: Pins of CON401

Pin	Signal	I/O	Description
1	TXD	O	Transmit data
2	RXD	I	Receive data
3	DCD	O	Data carrier detection
4	RI	O	Ring indicator
5	CTS	O	Clear to send
6	GND		Ground
7	DTR	I	Data terminal ready
8	DBG_RXD	I	Receive data
9	RTS	I	Request to send
10	DBG_TXD	O	Transmit data

3.8.2 POWER



Figure 14: POWER points

Table 12: Pins of CON103

Pin	Signal	I/O	Description
1	TEMP_BAT	I	Measurement of battery temperature
2	VDD_EXT	O	Supply 2.8V voltage for external circuit
3	NC		Not connected
4	VBAT	I	Power supply for module
5	STATUS	O	Module operating status
6	VCHG	I	Voltage input for the charging circuit
7	BUZZER	O	Buzzer output
8	GND		Ground
9	VRRTC	I/O	RTC supply
10	NC		Not connected

3.8.3 KEYPAD



Figure 15: KEYPAD points

Table 13: Pins of CON102

Pin	Signal	I/O	Description
1	KBC0	I	Keypad interface
2	KBR0	O	
3	KBC1	I	
4	KBR1	O	
5	KBC2	I	
6	KBR2	O	
7	PWRKEY	I	Turn on/off the module
8	TXD3	O	Transmit data
9	EMERG_OFF	I	Shut down the module in emergency.
10	RXD3	I	Receive data

3.8.4 LCD



Figure 16: LCD points

Table 14: Pins of CON101

Pin	Signal	I/O	Description
1	DISP_DATA	I/O	LCD display interface
2	DISP_D/C	O	
3	DISP_CLK	O	
4	DISP_RST	O	
5	DISP_CS	O	
6	ADC0	I	Analog to digital converter
7	GPIO0	I	General purpose input/output Port
8	GND		Ground
9	SIM_PRESENCE	I	SIM card detection
10	LIGHT_MOS	O	Open drain output port

4. EVB Accessories Assembly

Generally, the EVB and its accessories are equipped as Figure 17 and Figure 18.



Figure 17: EVB and accessories equipment

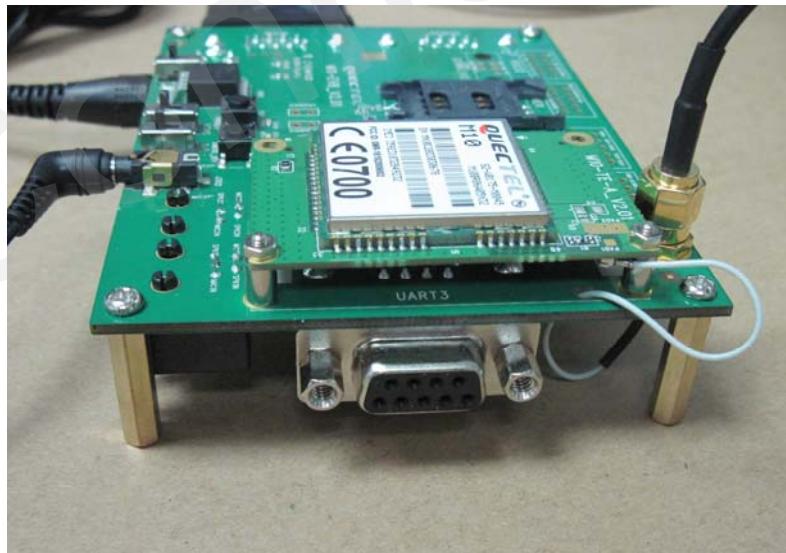


Figure 18: Side view of EVB

5. Illustration

5.1. Power on

- (1) Connect the M10-TE-A to the 60 pins connector on M10 EVB.
- (2) Insert the plug of the 5V power adapter.
- (3) Turn the Switch S1 to **ON** state, Switch S2 to **OFF** state, and Switch S3 to **OFF** state. The LED L1 on the EVB will be bright.
- (4) Press the PWRKEY for about 2 seconds. The LED L4 will be flashing which indicates the module in working status. With L4 is on, the module begins running. Otherwise, please check the circuit.
- (5) The LED L2 will be flashing at a certain frequency. The GSM working status of the module can be judged by the LED status.

Please refer to **document [3]** for detailed network status indication. .

5.2. Communicate with the module

- (1) Connect the Serial Port 1 on EVB to PC's USB port with the USB to UART converter cable.
- (2) Open the HyperTerminal (AT command window) on PC. The location of the HyperTerminal in windows XP is: START → program → accessory → communication →HyperTerminal. Set appropriate Baud Rate (such as 115200 bps) and COM number which can be checked by the Device Manager on PC.
- (3) Connect an antenna to M10-TE-A with an RF cable.
- (4) Insert SIM card into the SIM card socket.
- (5) Insert earphone or handset into audio interface.
- (6) For Power On operation, please refer to **chapter 5.1**.
- (7) After waiting for 2~3 seconds, customer should first input “AT” or “at” string once or more until receiving “OK” from the module in the HyperTerminal.
The module is set to autobauding mode in default configuration. This operation is to synchronize the baud rate between the computer and the module.
- (8) Input AT command and the module will execute its corresponding function.
Customer can refer to **document [1]** for the details of AT commands. For instance, when input “ATD112;” an emergency call is established.

5.3. Firmware upgrade through UART1

- (1) Start the Firmware Upgrade Tool in the PC.
- (2) Press the **START** button in the Firmware Upgrade Tool.
- (3) Switch the S3 and S1 in the EVB to **ON** state as shown in **Figure 18**.

After these steps, the firmware refreshing process will be proceeding. For more details, please refer to **document [4]**.



Figure 19: Switches state for firmware downloading

5.4. Turn Off

Press the PWRKEY button for about 2 seconds, the module will be turned off.

5.5. Emergency Off

Press the EMERG_OFF button for more than 0.1 second, the module will be shut down immediately. After that, the module can be restarted by pressing the PWRKEY button. Please note that this operation is harmful to the whole module system and should only be done in emergency such as failing to turn off the module through the PWRKEY button.

5.6. UART 3

Quectel module provides two UART ports for achieving Dual UART. One is UART1 which is the main UART; the other is UART3 which is the assisted UART.

AT+QEAUART=1 is used to enable UART3. Please restart the module after executed the command. For more details, please refer to *document [5]*.

UART3 only includes TX data (TXD), RX data (RXD). For the connection of serial port 3, please refer to *Figure20*.

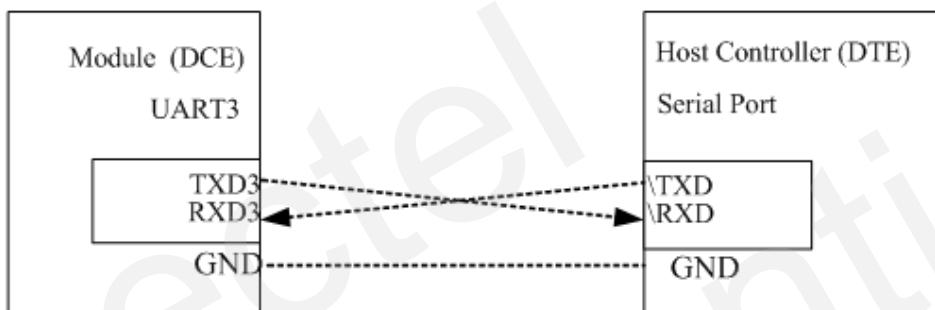


Figure 20: Connection of UART 3

6. 60 PINs Assignment of DIP Connector

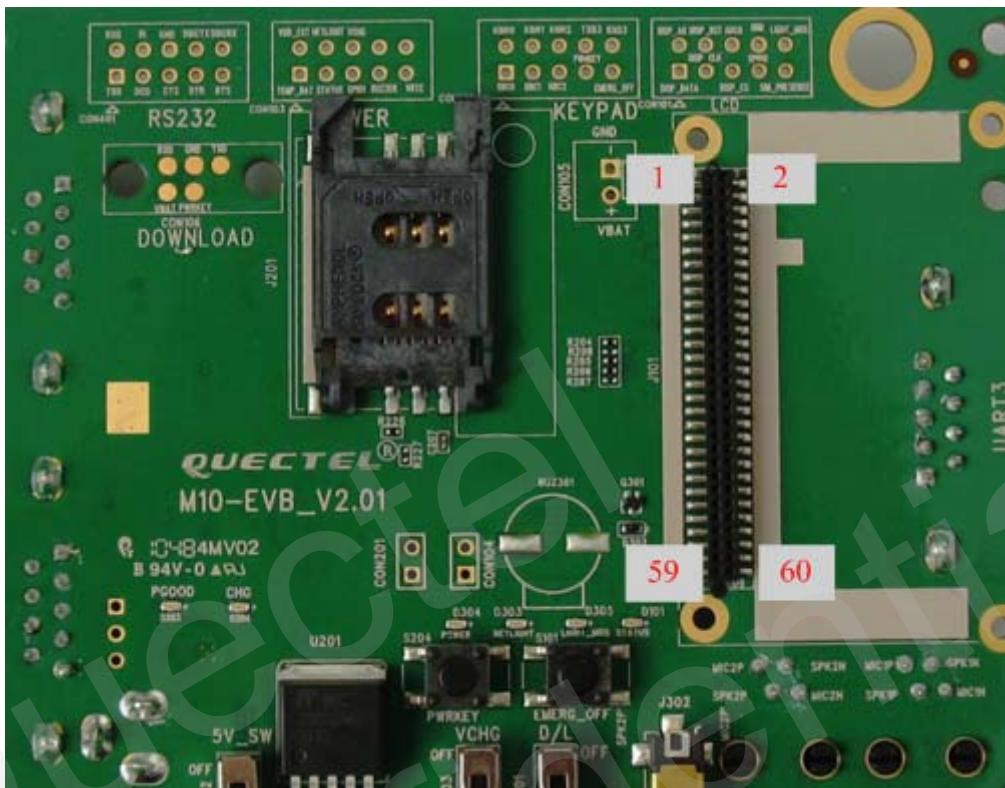


Figure 21: DIP connector of EVB

Table 15: Pin definition of the 60-pin DIP connector

PIN NO.	PIN NAME	I/O	PIN NO.	PIN NAME	I/O
1	VBAT	I	2	GND	
3	VBAT	I	4	GND	
5	VBAT	I	6	GND	
7	VBAT	I	8	GND	
9	VBAT	I	10	GND	
11	VCHG	I	12	ADC0	I
13	TEMP_BAT	I	14	VRTC	I/O
15	VDD_EXT	O	16	NETLIGHT	O
17	PWRKEY	I	18	KBR0	O
19	STATUS	O	20	KBR1	O
21	GPIO0	I/O	22	KBR2	O

23	BUZZER	O
25	SIM_VDD	O
27	SIM_RST	O
29	SIM_DATA	I/O
31	SIM_CLK	O
33	SIM_PRESENCE	I
35	GPIO1_KBC5	I/O
37	DCD	O
39	DTR	I
41	RXD	I
43	TXD	O
45	RTS	I
47	CTS	O
49	RI	O
51	AGND	
53	SPK1P	O
55	SPK1N	O
57	SPK2P	O
59	AGND	
24	TXD3	O
26	RXD3	I
28	KBC0	I
30	KBC1	I
32	KBC2	I
34	LIGHT_MOS	O
36	EMERG_OFF	I
38	DISP_CS	O
40	DISP_CLK	O
42	DISP_DATA	I/O
44	DISP_D/C	O
46	DISP_RST	O
48	DBG_RXD	I
50	DBG_TXD	O
52	AGND	
54	MIC1P	I
56	MIC1N	I
58	MIC2P	I
60	MIC2N	I



Shanghai Quectel Wireless Solutions Co., Ltd.
Room 501, Building 13, No.99 Tianzhou Road, Shanghai, China 200233
Tel: +86 21 5108-6236
Mail: info@quectel.com